SAFETY PRECAUTIONS



Please follow these safety precautions in order to ensure proper installation and to prevent any bodily injuries and structural failures.

Please note that this unit includes poles and rods that are made out of steel, which can cause bodily injuries and/or damages to the floor if dropped or held in an improper manner during assembly.

Example

- 1. This unit is designed for use by keeping the poles fixed to the floor and the ceiling. Therefore, it is not safe for children to climb or hang on the unit. Children should be under adult supervision at all times to prevent any injuries.
- 2. Overloading the unit might cause it to become unstable and either tip or collapse, which may cause serious bodily injury and/or damage to personal possessions.
- 3. In order to prevent any accidental collapses due to improper care, install the unit, so that it is slightly tilted towards the wall, not perpendicular to the floor.
- 4. We recommend that you frequently examine the unit for any loose bolts or wobbling.

Please note

The unit may collapse if it is not securely fixed to the floor or if it is installed to a weak part of the ceiling.

Differentiating Between the Poles

The upper poles are thinner than the lower poles. (Make sure the upper poles attach to the ceiling mount and lower poles to the floor mount during installation.)

BEFORE ASSEMBLY



Remove the white pin by pressing gently on the one-touch button and pulling the pin down.

Remove the white pin by pressing gently on the one-touch button and pulling the pin down.

BEFORE DISASSEMBLY

Ceiling side

4 inch


Assemble the fixtures (shelf brackets, rod brackets, etc.) at least 4 in. away from the ceiling mount for



▶ First, unscrew the safety bolt behind the one-touch button. Press the one-touch button to lower the upper pole. We strongly recommend that you hold onto the upper pole while lowering it by using one hand to hold the upper pole and the other to press the one-touch button.

COMPLETE PARTS LIST

*Check your inventory before beginning installation.

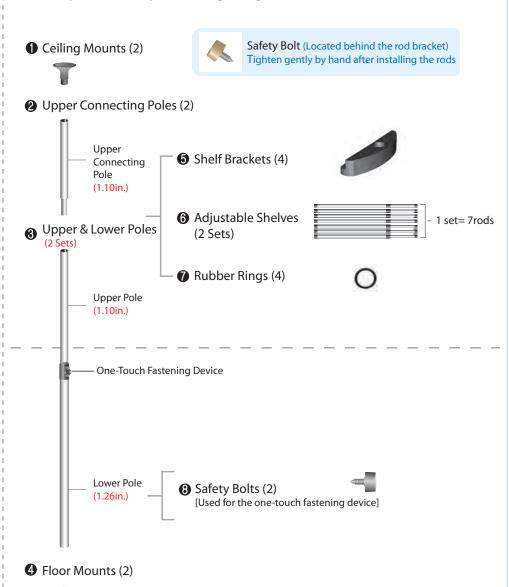


ASSEMBLY INSTRUCTIONS (POLE)

If the ceiling is low, assemble the parts to the upper and lower poles in order as s hown in the diagram, without the upper connecting pole.

Pole 1 Pole 2 **6** Ceiling Mounts (3) **6** Ceiling Mounts (3) A Shelf Bracket A Shelf Bracket Rubber Ring Rubber Ring Shelf Bracket Shelf Bracket Rubber Ring Rubber Ring Upper Connecting Pole (Thinner Pole 기둥 연결봉 Connect the poles together Connect the poles together by inserting the thinner by inserting the thinner end of the upper connecting end of the upper connecting pole to the upper pole. pole to the upper pole. 위쪽 기둥 가는기둥) Upper Pole 원터치고정장치 One-Touch Fastening Device 아래쪽 기둥 (굵은기둥) Lower Pole (Thicker Pole Floor Mount Floor Mount

INSTALLATION (POLE)

To Install the Poles,

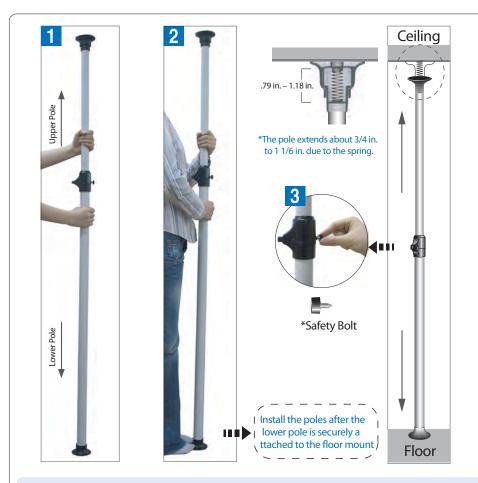

Explanation


- 1 2 1,2 At the desired location, hold the lower pole with one hand and the upper pole with the other and push it up to the ceiling so that the pole is fixed upright to both the ceiling and the floor. (Make sure the pole is fixed securely on the ceiling by pushing the pole up as far as you can (which can extend up to 1 1/6 in. due to the spring mechanism in the ceiling mount)
 - 3 After installing the pole, tighten the safety bolt behind the one-touch fastening device by hand for safer use of the unit.

The rubber ring helps keep the fixtures in place and should be inserted underneath each rod bracket.

(The rubber rings inserted underneath the rod brackets are not visible after installation.)

ASSEMBLY INSTRUCTIONS (ADJUSTABLE SHELVING)

TO INSTALL ADJUSTABLE SHELVES,

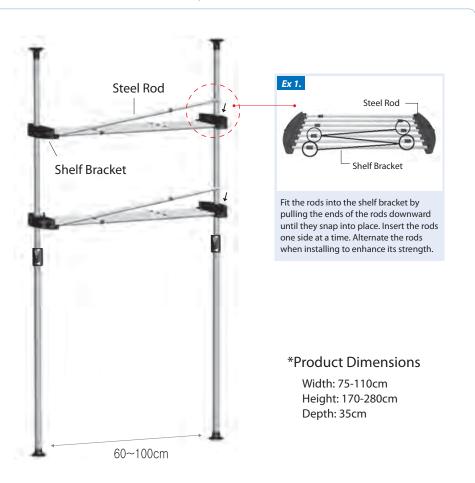

- 1. Set the poles upright and distance them apart to the desired width of the shelving.
- 2. After keeping the shelf brackets level, fit the rods into the shelf bracket as shown in Ex. 1. Each shelf bracket is grooved to fit the rods tightly in place.
- 3. Adjust the height of the shelf bracket to the desired height using the rubber ring and then gently tighten the safety bolt in the back by hand.