

1

NHC-609-1(PHUS-0052)

SAFETY PRECAUTIONS

Please note

Please note that this unit includes poles and rods that are made out of steel, which can cause bodily injuries and/or damages to the floor if dropped or held in an improper manner during assembly.

- This unit is designed for use by keeping the poles fixed to the floor and the ceiling. Therefore, it is not safe for children to climb or hang on the unit. Children should be under adult supervision at all times to prevent any injuries.
- Overloading the unit might cause it to become unstable and either tip or collapse, which may cause serious bodily injury and/or damage to personal possessions.
- In order to prevent any accidental collapses due to improper care, install the unit, so that it is slightly tilted towards the wall, not perpendicular to the floor.
- We recommend that you frequently examine the unit for any loose bolts or wobbling.

Please note

The unit may collapse if it is not securely fixed to the floor or if it is installed to a weak part of the ceiling.

Differentiating Between the Poles

The upper poles are thinner than the lower poles. Make sure the upper poles attach to the ceiling mount and lower poles to the floor mount during installation.

Attaching the Poles to the Floor Mounts

The upper poles are thinner than the lower poles. Make sure the upper poles attach to the ceiling mount and lower poles to the floor mount during installation.

Role of the Rubber Ring

The rubber ring helps adjust the height of the fixtures and prevents them from slipping. The rubber rings should be inserted underneath each shelf bracket. The rubber rings inserted underneath the shelf brackets are not visible after installation.

BEFORE ASSEMBLY

One-Touch Fastening Device

One-Touch Button

Remove the red pin by pressing gently on the one-touch button and pulling the pin down.

Throw away the red pin.

It is a tool necessary during the shipping process and can be thrown away.

BEFORE DISASSEMBLY

Upper Pole

Lower Pole

Manual Fastening Device

First, unscrew the safety bolt behind the one-touch button. Press the one-touch button to lower the upper pole. We strongly recommend that you hold onto the upper pole while lowering it by using one hand to hold the upper pole and the other to press the one-touch button.

2

BEFORE DISASSEMBLY

Upper Pole

One-Touch Fastening Device

Lower Pole

Lowering the pole by loosening the set screw without holding onto the pole may be dangerous. Please hold the upper pole with one hand and loosen the set screw with the other when lowering the pole.

Using Hanger Retrievers

Use hanger retrievers to conveniently retrieve hangers from out of reach rack.

COMPLETE PARTS LIST

Product Components

*Check your inventory before beginning installation.

- Ceiling Mounts (4)
- Upper & Connection & Lower Poles (4 Sets)
- Floor Mounts (4)
- Safety Bolt (Located behind the rod bracket) Tighten gently by hand after installing the rods
- Hanger Rods (4)
- Rod Brackets (8)
- Rubber Rings (8)
- One-Touch Fastening Device
- Pant Rods (2)
- Pant Rod Supports (2)
- Shelf Brackets (4)
- Wire Basket Shelves (2)
- Rubber Rings (6)
- Pant Hangers (10)
- Free Gift: Hanger Retriever (1)

5

NHC-609-1(PHUS-0052)

INSTALLATION (POLE)

To Install the Poles,

1. Hold the upper pole with one hand and the lower pole with the other and push it up to the ceiling so that the pole is fixed upright to both the ceiling and the floor. (Make sure the pole is fixed securely on the ceiling by pushing the pole up as far as you can (which can extend up to 1 1/6 in. due to the spring mechanism in the ceiling mount).
2. After installing the pole, tighten the safety bolt behind the one-touch fastening device by hand for safer use of the unit.

INSTALLATION TIP !!!

[Figure 1] Pull the upper pole slightly upward until the ceiling mount touches the ceiling. Mark it with a pencil as shown in Figure 1.

[Figure 2] Push the upper pole to the ceiling as hard as you can. Make sure to have a gap about 15-25mm (0.6-1 inch) between marked line and the One-Touch device.

Appx. 0.6 ~1.0 inch

One touch device

*If the marked line is too low or is not visible, pull the upper pole against the ceiling firmly to check if it is assembled properly.

6

INSTALLATION (POLE & OTHER FIXTURES)

To install poles and other fixtures,

Insert the rods into the rod bracket.

Insert the wire basket shelves into the shelf bracket. Wire basket shelves can also be used upside down as shelves.

(Pole 1) (Pole 2) (Pole 3) (Pole 4)

Hanger Rod

Rod Bracket

Pant Hangers

Pant Rod

Pant Rod Support

One-Touch Fastening Device

Wire Basket Shelf

Shelf Bracket

29.5 in. 29.5 in. 29.5 in.

Fit the ends of the pant rod into the pant rod support by pulling the ends of the rods downward until they snap into place.

- Set the poles upright and distance them apart to the desired width of the unit.
- After keeping the rod brackets level, fit the rods into the rod bracket as shown in Ex. 1.
- Adjust the height of the rod and shelf brackets to the desired height using the rubber ring and then gently tighten the safety bolts in the back by hand.
- Hang pant hangers on the pant rod.

3

ASSEMBLY INSTRUCTIONS (POLE)-1

Pole 1

- Ceiling Mount
- Rod Bracket
- Rubber Ring
- Upper Connection Poles (Thinner Pole)
- Upper Pole (Thinner Pole)
- One-Touch Fastening Device
- Lower Pole (Thicker Pole)
- Pant Rod Support
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Floor Mount

Extend the upper pole about 20 in. before assembling the parts in order, as shown in the diagram.

Used to support rods. Please assemble the bracket so that it is U-shaped.

Pole 2

- Ceiling Mount
- Rod Bracket
- Rubber Ring
- Upper Connection Poles (Thinner Pole)
- Upper Pole (Thinner Pole)
- One-Touch Fastening Device
- Lower Pole (Thicker Pole)
- Pant Rod Support
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Floor Mount

Extend the upper pole about 20 in. before assembling the parts in order, as shown in the diagram.

Used to support rods. Please assemble the bracket so that it is U-shaped.

4

ASSEMBLY INSTRUCTIONS (POLE)-2

Pole 3

- Ceiling Mount
- Rod Bracket
- Rubber Ring
- Upper Connection Poles (Thinner Pole)
- Upper Pole (Thinner Pole)
- One-Touch Fastening Device
- Lower Pole (Thicker Pole)
- Pant Rod Support
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Floor Mount

Extend the upper pole about 20 in. before assembling the parts in order, as shown in the diagram.

Used to support rods. Please assemble the bracket so that it is U-shaped.

Pole 4

- Ceiling Mount
- Rod Bracket
- Rubber Ring
- Upper Connection Poles (Thinner Pole)
- Upper Pole (Thinner Pole)
- One-Touch Fastening Device
- Lower Pole (Thicker Pole)
- Pant Rod Support
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Shelf Bracket
- Rubber Ring
- Floor Mount

Extend the upper pole about 20 in. before assembling the parts in order, as shown in the diagram.

Used to support rods. Please assemble the bracket so that it is U-shaped.

7

FINISHED PRODUCT

*Refer back to the diagram during installation as needed.

(Pole 1) (Pole 2) (Pole 3) (Pole 4)

***Product Dimensions:**

Width: 98.4 in.

Depth: 12.6 in.

Height: 67~117 in.

Wire Basket Shelf: 29.5X11.8X1.4 in.